



Water Filter for Fridge

Tel. 1300 767 072

Fisher & Paykel
innovative living

All the water to your fridge is filtered to remove impurities through a cartridge located in a position of your choice outside the refrigerator. Of course, this will need changing approximately every 6 months or up to 740 gallons (2800 L) depending on the quality of the incoming water and how much you use the dispenser.

- There is a replacement indicator  icon on the control panel which will appear when the filter needs replacing. It will flash, when dispensing water, as a reminder.

Changing the water filter cartridge

- 1 Grasp and firmly twist the cartridge in an anticlockwise direction (to the left when installed in the recommended orientation) as shown in Diagram 1.
- 2 Pull the cartridge away from the filter head (down when installed in the recommended orientation) as shown in Diagram 2.
 - It is not unusual for a few drops of water to be present when filter is removed.
- 3 Discard old filter.
- 4 Filter installation:
 - Remove protective cap on spigot on head.
 - Push the cartridge up towards filter head while rotating it in a clockwise direction (to the right when installed in the recommended orientation) as shown in Diagram 3.
- 5 Reset filter indicator icon on the display (this will set to remind you when the filter is due to be replaced again,
- 6 Dispense 5 qt / 5 L to flush the cartridge, removing trapped air and harmless carbon fines.
- 7 A few drips may appear out of the dispenser over the next few days as the remaining trapped air is cleared.



Diagram 1

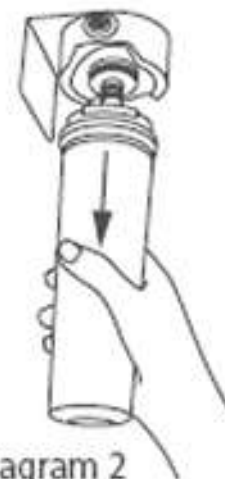


Diagram 2

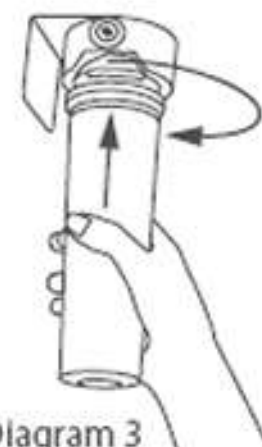


Diagram 3

To reset filter indicator

Important!

We recommend the water filter is used from installation.

Do not reset monitor before filter is changed or filter monitoring will be inaccurate.

- Press and hold  and  buttons for 4 seconds to reset the filter indicator.
- If present the  icon in the **SETTINGS** screen will disappear when reset.

To disable filter indicator

Note: if disabled, you will not be reminded to change your filter.

- When no filter is to be fitted, you can disable the filter indicator.
- Press and hold ,  and  buttons for 4 seconds to turn this feature off/on.
- When activated or deactivated the  icon will flash and on or off will be displayed in the **MEASURED FILL** screen.
- We recommend that you do not disable the filter indicator if you have a filter fitted to the connection.